

Channel state file

Required:

Required when a channel network is specified.

Name:

The name is expected to be of the format `Channel.State.<MM.DD.YYYY.hh.mm.ss>`, where `<MM.DD.YYYY.hh.mm.ss>` is the time for which the model state is valid.

The file is located in the `Initial state` directory.

Read by:

`ReadChannelState()`

Format:

ASCII

Purpose:

Contains the amount of water in each channel segment. This allows a model restart with exactly the same initial conditions.

Details:

The channel state file lists each channel segment ID (the same as in the `Stream network file`) and the amount of water in that segment. There should be as many lines as there are segment IDs.