



Step requires power source testing (see "Power source testing" in the Troubleshooting Guide). Do not perform without authorization.



Step requires contacting an authorized electrician.

