

Surface routing files

Required:

Required by the Urban Module

Read by:

InitNetwork()

Format:

ASCII

Purpose:

Find out the location of the nearest channel to the in-basin cells (mask > 0) with a larger than 0 percentage of impervious surface.

Details:

The files consist 4 fields per line, specified in the following order:

Source row number	row number of source cell	<required>
Source col. number	column number of source cell	<required>
Dest. row number	row number of destination cell	<required>
Dest. col. number	column number of destination cell	<required>